Photoelectric Sensors with Synchronous Detection

BY Series INSTRUCTION MANUAL

TCD230051AA

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice. Follow Autonics website for the latest information.

Safety Considerations

• Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.

• Λ symbol indicates caution due to special circumstances in which hazards may occur.

Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

- 03. Do not disassemble or modify the unit. Failure to follow this instruction may result in fire
- 04. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire. 05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

▲ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

ailure to follow this instruction may result in fire or product damage. 02. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
- When using a separate power supply for the sensor and load, supply power to the sensor first.
- The power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000 m
- Pollution degree 3
- Installation category II

Product Components

• Emitter × 1. Receiver × 1 • Bracket \times 2

 Instruction manual • M3 bolt \times 4, M3 nut \times 4

Ordering Information

 
This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

BY	0	0	-	8	4	6	6	-	0
• Sensing direction				(🖸 Outpu	ıt			
No mark S: Side	k: Front				T: Solid st	ate (tran	sistor)		
Sens	ing dista	nce			🛛 Emitte	er/Recei	ver		
500: 500 mm					1: Emitter				
					2: Receive	er			
Sensing type				Connection					
T: Through-beam				No mark: Cable type					
4 Powe D: 12 - 24	er supply 4 VDC	ý					-		

Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
- Installation environment and background (reflected light)
- Sensing distance and sensing target
- Direction of target's movement
- Characteristic curves
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 0.3 N m. Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- · Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

Through-beam




Install to face each other

Operation Timing Chart and Indicators

	Dark ON
Received light	Received
Received light	Interrupted
Operation indicator	
(red)	OFF L
Transistor output	
Tunisistor output	OFF L


Connections

• Be sure to use the same power for the emitter and receiver. Be sure to connect the synchronous wire (white) of the emitter and receiver.

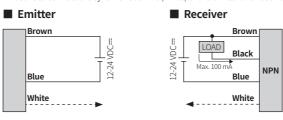

Circuit

 NPN open collector output



· OCP (over current protection), SCP (short circuit protection) · If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

 
Dimensions


B

• Unit: mm, For the detailed drawings, follow the Autonics website.

- A Optical axis
- Operation indicator (red)

 
Side detection type Front detection type r R

 


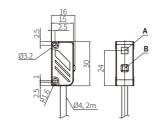










Front detection type

 Side detection type





Specifications					
Model	3Y 500-TDT-				
Sensing type	Through-beam				
Sensing distance	500 mm				
Sensing target	Opaque materials				
Min. sensing target	≥Ø5mm				
Response time	≤1ms				
Light source	Infrared				
Peak emission wavelength	940 nm				
Operation mode	Dark ON mode				
Indicator	Operation indicator (red)				
Certification	C (B) IS LETTER ROMS [A]				
Unit weight (packaged)	\approx 150 g (\approx 200 g)				
Power supply	12-24 VDC== ±10% (ripple P-P: ≤ 10%)				
Current consumption	Emitter: ≤ 30 mA, receiver: ≤ 30 mA				
Control output	NPN open collector output				
Load voltage	≤ 26.4 VDC==				
Load current	≤ 100 mA				
Residual voltage	≤1VDC=				
Protection circuit	Reverse power protection circuit, output short overcurrent protection circuit				
Insulation resistance	\geq 20 M Ω (500 VDC== megger)				
Noise immunity	$\pm 240\text{VDC}{=}$ the square wave noise (pulse width: 1 $\mu\text{s})$ by the noise simulator				
Dielectric strength	Between the charging part and the case: 1,000 VAC \sim 50/60 Hz for 1 min				
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours				
Shock	500 m/s ² (≈ 50 G) in each X, Y, Z direction for 3 times				
Ambient illuminance (receiver)	Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx				
Ambient temperature	-10 to 60 °C, storage: -25 to 70 °C (no freezing or condensation)				
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)				
Protection rating	IP50 (IEC standard)				
Connection	Cable type				
Cable specification	Ø 4 mm, 4-wire (Emitter: 3-wire), 2 m				
Wire specification	AWG26 (0.52 mm, 20-core), insulator outer diameter: Ø 1 mm				
Material	Case: PC, sensing part: PC, bracket: SPCC, bolt: SCM, nut: SCM				

