

Single-Beam Area Sensors

BW Series

INSTRUCTION MANUAL

TCD210006AC

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

▲ Warning Failure to follow instructions may result in serious injury or death.

01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

Failure to follow this instruction may result in personal injury, economic loss or fire.

02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire.

04. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

05. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire.

06. This product is not safety sensor and does not observe any domestic nor international safety standard.

Do not use this product with the purpose of injury prevention or life protection, as well as in the place where economic loss maybe present.

▲ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage.

02. Use a dry cloth to clean the unit, and do not use water or organic solvent.

Failure to follow this instruction may result in fire.

03. Do not use a load over the range of rated relay specification.

Failure to follow this instruction may result in fire, relay broken, contact melt, insulation failure or contact failure.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- 12 - 24 VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 1 sec after supplying power. When using separate power supply for the sensor and load, supply power to sensor first.
- When using switching mode power supply to supply the power, ground F.G. terminal and connect a condenser between 0 V and F.G. terminal to remove noise.
- When connecting a DC relay or other inductive load, remove surge by using diodes or varistors.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category II

Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
 - Installation environment and background (reflected light)
 - Sensing distance and sensing target
 - Direction of target's movement
 - Feature data
- If the installation environment has reflected light from the wall or floor, a interval distance of at least 0.5 m is required.
- When installing multiple sensors closely, it may result in malfunction due to mutual interference. refer to the interference protection in the product manual.
- Do not use in places where the light-receiving sensor is exposed to direct sunlight or where the ambient illumination is higher than the specification.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

BW ① - ② ③

① Optical axis pitch
Number: Optical axis pitch (unit: mm)

② Number of optical axes
Number: Number of optical axes

③ Control output
No-mark: NPN open collector
P: PNP open collector

Product Components

- Product × 1
- Instruction manual × 1
- Bracket A × 4
- Bracket B × 4
- Fixing bolt × 8


Sold Separately

- M12 connection cable: CID4-□T(R) (1 set - emitter and receiver)


Connections

Brown	12 - 24 VDC	White	SYNC
Blue	0 V	Black	TEST (M/S) (emitter) / OUT (receiver)

■ NPN open collector output

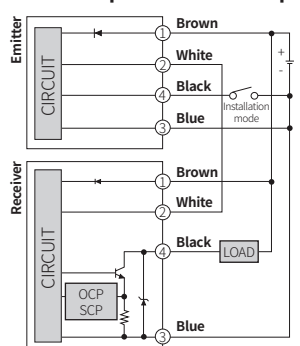


■ PNP open collector output

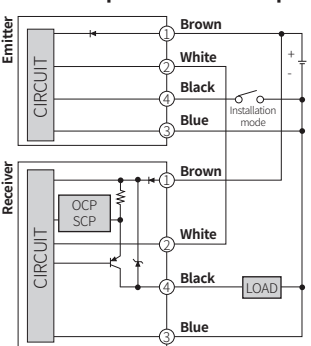


• OCP (over current protection), SCP (short circuit protection)

Operation Timing Chart

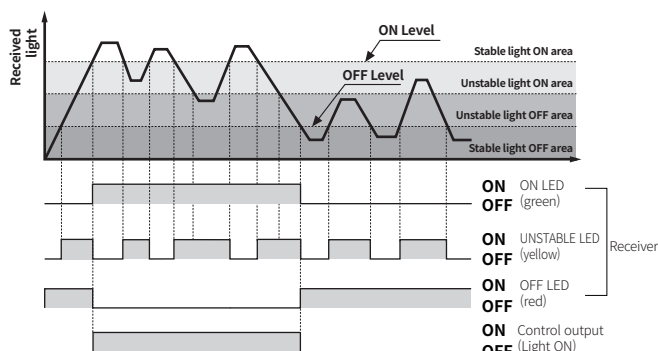

Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

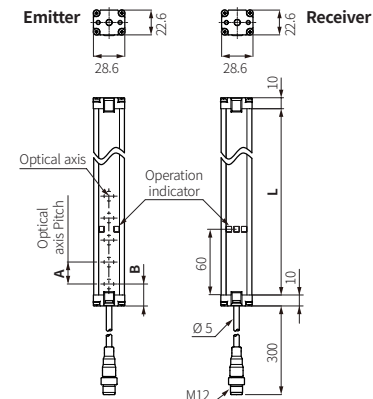


■ Optical axis Pitch (A, B) 20 mm

Model	Product length (L)	Num. of optical axes	Sensing height
BW20-08(P)	160	8	140 mm
BW20-12(P)	240	12	220 mm
BW20-16(P)	320	16	300 mm
BW20-20(P)	400	20	380 mm
BW20-24(P)	480	24	460 mm
BW20-28(P)	560	28	540 mm
BW20-32(P)	640	32	620 mm
BW20-36(P)	720	36	700 mm
BW20-40(P)	800	40	780 mm
BW20-44(P)	880	44	860 mm
BW20-48(P)	960	48	940 mm


■ Optical axis Pitch (A, B) 40 mm

Model	Product length (L)	Num. of optical axes	Sensing height
BW40-04(P)	160	4	120 mm
BW40-06(P)	240	6	200 mm
BW40-08(P)	320	8	280 mm
BW40-10(P)	400	10	360 mm
BW40-12(P)	480	12	440 mm
BW40-14(P)	560	14	520 mm
BW40-16(P)	640	16	600 mm
BW40-18(P)	720	18	680 mm
BW40-20(P)	800	20	760 mm
BW40-22(P)	880	22	840 mm
BW40-24(P)	960	24	920 mm

■ Bracket A

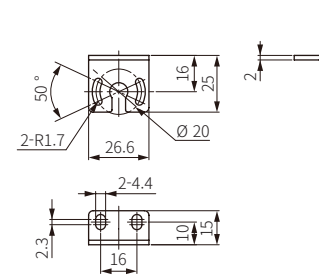

■ Bracket B

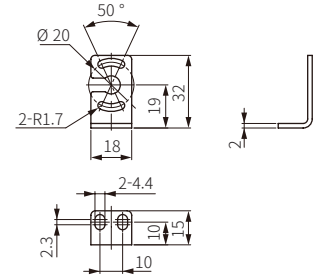

Operation Indicator

☀ ON	🌑	Flashing at 0.5 sec interval	👁👁 ⁰¹⁾	Cross-flashing at 0.5 sec interval
● OFF	👁👁/👁👁	Flashing simultaneously at 0.5 sec interval	👁👁	Sequence flashing at 0.5 sec interval

01) Repeated twice, flashes twice at 0.5 second intervals

Item	Emitter indicator		Receiver indicator			Control output
	Green	Red	Green	Yellow	Red	
Power ON	☀	●	-	-	-	-
MASTER operation	☀	●	-	-	-	-
SLAVE operation	☀	☀	-	-	-	-
TEST input	☀	🌑	-	-	-	-
Break of emitter	👁👁	👁👁	-	-	-	-
Break of emitting element	👁	👁	☀	👁	👁	OFF
Installation mode						
Normal installation	👁	🌑	☀	●	🌑	OFF
Hysteresis section	●	🌑	●	☀	🌑	OFF
Abnormal installation	●	🌑	●	●	🌑	OFF
Stable light ON	-	-	☀	●	●	ON
Unstable light ON	-	-	☀	☀	●	ON
Unstable light OFF	-	-	●	☀	☀	OFF
Stable light OFF	-	-	●	●	☀	OFF
Break of receiver	-	-	👁👁	●	👁👁	OFF
Control output over current	-	-	👁	👁	☀	OFF
Malfunction of Synchronous line	-	-	🌑	●	🌑	OFF
Failure of emitter (time out)	-	-	🌑	🌑	🌑	OFF
Optical axis misalignment alarm	-	-	👁👁	☀	👁👁	-

Specifications

Model	BW20-□(P)	BW40-□(P)
Sensing method	Through-beam	
Light source	Infrared LED (850 nm modulated light)	
Sensing distance	0.1 to 7.0 m	
Sensing target	Opaque material	
Min. sensing target	≥ Ø 30 mm	≥ Ø 50 mm
Number of optical axes	8 to 48	4 to 24
Sensing height	140 to 940 mm	120 to 920 mm
Optical axis pitch	20 mm	40 mm
Response time	≤ 10 ms	
Operation mode	Light ON	
Functions	Emitter OFF (external diagnosis), self-diagnosis	
Interference protection	Interference protection by MASTER / SLAVE function ⁰¹⁾	
Synchronization type	Timing method by synchronous line	
Indicator	Emitter: Operation indicator (green, red), receiver: Operation indicator (red, yellow, green)	
Approval	CE, UKCA, ENEC	CE, UKCA, ENEC
Weight (packaged)	≈ 1.4 kg (≈ 2.1 kg) (based on BW20-48)	≈ 1.4 kg (≈ 2.1 kg) (based on BW40-24)

01) Connect 'TEST/M/S' of SLAVE emitter to 'SYNC' of MASTER. Refer to the product manual.

Power supply	12 - 24 VDC (ripple P-P: ≤ 10 %)
Current consumption	Emitter / receiver: ≤ 120 mA
Control output	NPN or PNP open collector output
Load voltage	≤ 30 VDC
Load current	≤ 100 mA
Residual voltage	NPN: ≤ 1 VDC, PNP: ≤ 2.5 VDC
Protection circuit	Reverse power protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC, megger)
Noise immunity	± 240 V the square wave noise (pulse width 1μs) by the noise simulator
Dielectric strength	Between the charging part and the case : 1,000 VAC ~ 50 / 60 Hz for 1minute
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours
Shock	500 m/s ² (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient illumi. (receiver)	Ambient light: ≤ 100,000 lx
Ambient temp.	-10 to 55 °C, storage: -20 to 60 °C (no freezing or condensation)
Ambient humi.	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection rating	IP65 (IEC standard)
Cable spec.	Ø 5 mm, 4-wire, 300 mm
Connector spec.	M12 plug connector
Material	Case: AL, front cover and sensing part: acryl

Installation Mode

This function is for stable installation.

For the first installation, enter installation mode.

- Inputting 0 V to 4th terminal (black, MODE) of emitter, supply power to the product to enter the installation mode.
- After entering installation mode, install the unit at the position where green LED of receiver operation indicator turns ON.
- After installation, disconnect 4th terminal (black, MODE) of emitter and re-supply power to the unit.

Troubleshooting

Malfunction	Cause	Troubleshooting
Non-operation	Power supply Cable incorrect connection, or disconnection Out of rated sensing distance	Supply the rated power. Check the wiring connection. Use it within rated sensing distance.
Non-operation in sometimes	Pollution by dirt of sensor cover Connector connection failure	Remove dirt by soft brush or cloth. Check the assembled part of the connector.
Control output is OFF even though there is not a target object.	Out of the rated sensing distance There is an obstacle to cut off the emitted light between emitter and receiver. There is strong electric wave or noise generator such as motor, electric generator, or high voltage line, etc.	Use it within the rated sensing distance. Remove the obstacle. Put away the strong electric wave or noise generator.
LED displays for break of emitter	Break of emitter	
LED displays for break of receiver	Break of receiver	Please contact customer service center.
LED displays for break of emitting element	Break of emitting element	
LED displays for malfunction of synchronous line	Synchronous line incorrect connection or disconnection Break of synchronous circuit of emitter or receiver	Check the wiring connection. Please contact customer service center.
LED displays for failure of emitter	Break of emitter	Treat after checking the emitter display LED.
LED displays for over current	Control output line is shorted out. Over load	Check the wiring connection. Check the rated load capacity.