

## Independent Single Display PID Temperature Controllers

# TR1D Series

## INSTRUCTION MANUAL

DRW190837AE

**Autonics**

Thank you for choosing our Autonics product.

**Read and understand the instruction manual and manual thoroughly before using the product.**

**For your safety, read and follow the below safety considerations before using.**

**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

### Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

**⚠ Warning** Failure to follow instructions may result in serious injury or death

**01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.

**02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**

Failure to follow this instruction may result in explosion or fire.

**03. Install the unit on DIN rail to use.**

Failure to follow this instruction may result in electric shock.

**04. Do not connect, repair, or inspect the unit while connected to a power source.**

Failure to follow this instruction may result in fire or electric shock.

**05. Check 'Connections' before wiring.**

Failure to follow this instruction may result in fire.

**06. Do not disassemble or modify the unit.**

Failure to follow this instruction may result in fire or electric shock.

**⚠ Caution** Failure to follow instructions may result in injury or product damage

**01. When connecting the power input and relay output, use AWG 20 (0.50 mm<sup>2</sup>) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m.**

**When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m.**

Failure to follow this instruction may result in fire or malfunction due to contact failure.

**02. Use the unit within the rated specifications.**

Failure to follow this instruction may result in fire or product damage

**03. Use a dry cloth to clean the unit, and do not use water or organic solvent.**

Failure to follow this instruction may result in fire or electric shock.

**04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**

Failure to follow this instruction may result in fire or product damage.

### Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case of installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.

- When changing the input sensor, turn off the power first before changing. After changing the input sensor, modify the value of the corresponding parameter.
- Do not overlapping communication line and power line. Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude Max. 2,000 m
  - Pollution degree 2
  - Installation category II

### Ordering Information

Model	Control output1	Control output2	Option output	Additional function
TR1D-14RN <sup>01)</sup>	Relay	-	-	-
TR1D-14RR	Relay	Relay ↔ Alarm	-	CT input, Dual alarm output <sup>02)</sup>
TR1D-R4RR	Relay	Relay ↔ Alarm	Transmission	CT input, Dual alarm output <sup>02)</sup>
TR1D-T4RR	Relay	Relay ↔ Alarm	Communication	CT input, Dual alarm output <sup>02)</sup>
TR1D-14CN <sup>01)</sup>	Current/SSR	-	-	-
TR1D-14CC	Current/SSR	Current/SSR ↔ Transmission	-	CT input
TR1D-R4CC	Current/SSR	Current/SSR ↔ Transmission	Transmission	CT input, Dual transmission output
TR1D-T4CC	Current/SSR	Current/SSR ↔ Transmission	Communication	CT input

01) The model does not support terminal for the control output 2 is not available to use heating&cooling control and alarm outputs at the same time.

02) It is not possible to use dual alarm output and heating&cooling control at the same time.

### Product Components

- Product
- Instruction manual

### Manual

For proper use of the product, refer to the manuals and be sure to follow the safety considerations in the manuals.

Download the manuals from the Autonics website.


### Software

Download the installation file and the manuals from the Autonics website.

#### ■ DAQMaster

DAQMaster is comprehensive device management program. It is available for parameter setting, monitoring.

### Unit Descriptions

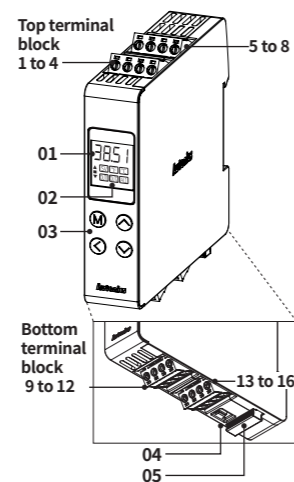

**01. PV / SV display part (Red)**  
RUN mode: Displays PV (Present value) and SV (Setting value).  
Parameter: Displays name and setting value of parameters.

Indicator	ON condition
SV	SV display
OUT□	Control output□ ON
AL1	AL1 alarm output ON
■	The difference between PV and SV is less than 2°C
▲/▼	The difference between PV and SV is greater than 2°C
°C or °F	'2-2 Temperature unit' parameter setting

**03. Control key**  
[M]: MODE key  
[◀] / [▲] / [▼]: Setting value control key

**04. PC loader port**  
Communication converter (Sold separately) connection

**05. Bracket handle**  
Use to mount and detach the DIN rail.

### Specifications

Series	TR1D Series
Power supply	100 - 240 VAC ~ 50/60 Hz
Allowable voltage range	90 to 110% of rated voltage
Power consumption	≤ 8 VA
Sampling period	50, 100, 250 ms
Input specification	Refer to 'Input Type and Using Range'.
Option input	CT input • 0.0-50.0 A (primary current measurement range) • CT ratio: 1/1,000, • Measurement accuracy: ±5% F.S. ±1digit
Control output	relay 250 VAC ~ 3 A 1a SSR 12 VDC ≐ ±3 V, ≤ 20 mA Current DC 4-20 mA or DC 0-20 mA (parameter), Load: ≤ 500 Ω
Alarm	AL1, AL2: 250 VAC ~ 3 A 1a
Option output	Transmission DC4-20 mA (Load resistance: ≤ 500 Ω, Output accuracy: ±0.3% F.S.) RS485 comm. Modbus RTU / ASCII

Display type	7 segment (red), 4-digit
Control type	ON/OFF, P, PI, PD, PID Control
Hysteresis	Control output: 1 to 100 °C/°F (0.1 to 100.0 °C/°F) Alarm output: 1 to 100 °C/°F (0.1 to 50.0 °C/°F)
Proportional band (P)	0.1 to 999.9 °C
Integral time (I)	0 to 9,999 sec
Derivative time (D)	0 to 9,999 sec
Control cycle (T)	Relay output: 0.5 to 120.0 sec, SSR drive output: 0.5 to 120.0 sec
Manual reset	0.0 to 100.0%
Dielectric strength	Between the power part and the case: 3,000 VAC ~ 50/60 Hz for 1 min
Vibration	0.75 mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours
Relay life cycle	Mechanical OUT1/2, AL1/2: ≥ 5,000,000 operations Electrical OUT1/2, AL1/2: ≥ 100,000 operations (resistance load: 250 VAC ~ 5 A)
Insulation resistance	≥ 100 MΩ (500 VDC ≐ megger)
Insulation type	Double insulation or reinforced insulation (dielectric strength between the power part and the case: 3 kV)
Noise immunity	Square shaped noise (pulse width: 1 μs) by noise simulator ±2 kV R-phase, S-phase
Memory retention	≈ 10 years (non-volatile semiconductor memory type)
Ambient temperature	-10 to 50 °C, storage: -20 to 60 °C (no freezing or condensation)
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)
Approval	CE
Unit weight (packaged)	≈ 123.5 g (≈ 194.5 g)

### Communication Interface

#### ■ RS485

Communication protocol	Modbus RTU / ASCII
Application standard	EIA RS485 compliance with
Maximum connection	31 units (address: 01 to 127)
Synchronous method	Asynchronous
Communication method	Two-wire half duplex
Communication effective range	≤ 800 m
Communication speed	4,800 - 9,600 (default) - 19,200 - 38,400 - 57,600 - 115,200 bps (parameter)
Response time	5 to 99 ms (default: 20 ms)
Start bit	1 bit (fixed)
Data bit	8 bit (fixed)
Parity bit	None (default), Odd, Even
Stop bit	1 bit, 2 bit (default)

• It is recommended to use Autonics communication converter. Please use twisted pair wire, which is suitable for RS485 communication.

### Input Type and Using Range

- The setting range of some parameters is limited when using the decimal point display.

Input type	Decimal point	Display Method	Using range(°C)	Using range(°F)
Thermo-couple	K (CA)	1	℄ ℄ RH -50 to 1,200	-58 to 2,192
		0.1	℄ ℄ RL -50.0 to 999.9	-58.0 to 999.9
	J (IC)	1	J ℄ CH -30 to 800	-22 to 1,472
		0.1	J ℄ CL -30.0 to 800.0	-22.0 to 999.9
	L (IC)	1	L ℄ CH -40 to 800	-40 to 1,472
		0.1	L ℄ CL -40.0 to 800.0	-40.0 to 999.9
T (CC)	1	℄ ℄ CH -50 to 400	-58 to 752	
	0.1	℄ ℄ CL -50.0 to 400.0	-58.0 to 752.0	
R (PR)	1	r ℄ P r 0 to 1,700	32 to 3,092	
	1	S ℄ P r 0 to 1,700	32 to 3,092	
RTD	DPt100 Ω	1	d ℄ ℄ H -100 to 400	-148 to 752
		0.1	d ℄ ℄ L -100.0 to 400.0	-148.0 to 752.0
	CU50 Ω	1	℄ U ℄ H -50 to 200	-58 to 392
		0.1	℄ U ℄ L -50.0 to 200.0	-58.0 to 392.0
	Nickel120 Ω	1	n ℄ ℄ 2 -80 to 260	-112 to 500

#### ■ Display accuracy


- The setting range of some parameters is limited when using the decimal point display.

Input type	Using temperature	Measurement accuracy
Thermocouple RTD	At room temperature (23°C ± 5 °C)	(PV ± 0.3% or ± 1 °C higher one) ± 1-digit • Thermocouple R (PR), S (PR) below 200 °C: (PV ± 0.5% or ± 3 °C higher one) ± 1-digit, Over 200 °C: (PV ± 0.5% or ± 2 °C higher one) ± 1-digit, • Thermocouple L (IC), RTD Cu50 Ω: (PV ± 0.5% or ± 2 °C higher one) ± 1-digit
	Out of room temperature range	(PV ± 0.5% or ± 2 °C higher one) ± 1-digit • Thermocouple R (PR), S (PR): (± 1.0% or ± 5 °C higher one) ± 1-digit • Thermocouple L (IC), RTD Cu50 Ω: (PV ± 0.5% or ± 3 °C higher one) ± 1-digit


• When multiple products (or more) are mounted without separation, ±1°C is added to all accuracy.

### Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

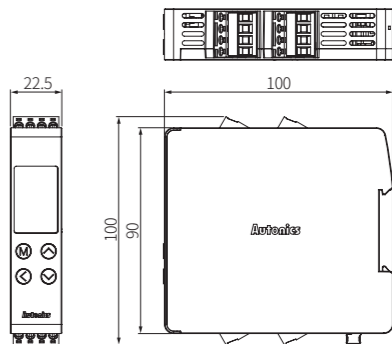

## Connections

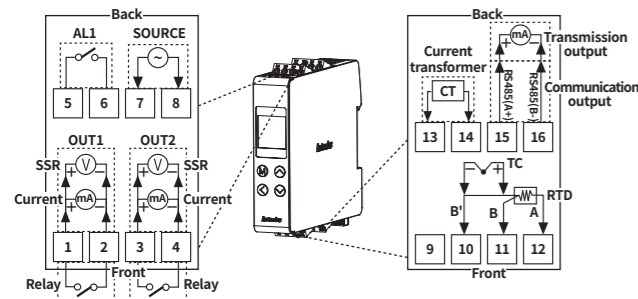

## Terminal support by model

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Function	Control output 1	Control output 2	Alarm output	Power	Temperature sensor input		CT input		Option output							
Model																
TR1D-14RN	Relay	-	Relay	○	-	-	TC	-	-	-	-	-	-	-	-	-
TR1D-14RR	Relay	Relay	Relay	○	-	-	TC	-	○	-	-	-	-	-	-	-
TR1D-R4RR	Relay	Relay	Relay	○	-	-	TC	-	○	-	-	-	-	Trans- mission	-	-
TR1D-T4RR	Relay	Relay	Relay	○	-	-	TC	-	○	-	-	-	-	Communi- cation	-	-
TR1D-14CN	Current	-	Relay	○	-	-	TC	-	-	-	-	-	-	-	-	-
TR1D-14CC	Current	Current	Relay	○	-	-	TC	-	○	-	-	-	-	-	-	-
TR1D-R4CC	Current	Current	Relay	○	-	-	TC	-	○	-	-	-	-	Trans- mission	-	-
TR1D-T4CC	Current	Current	Relay	○	-	-	TC	-	○	-	-	-	-	Communi- cation	-	-

## Initial Display When Power is ON

When power is supplied, after all display will flash for a while, series and model name are displayed sequentially. After input sensor type will flash twice, enter into RUN mode.

All display	Series	Model	Input specification	Run mode
8.8.8.8.	tr1d	t4rr	TC/RTD	26.6


## Errors

Display	Description	Troubleshooting
oPE n	Flashes if input sensor is disconnected or sensor is not connected.	Check input sensor status.
HHHH	Flashes when PV is higher than input range.	When input is within the rated temperature range, this display disappears.
LLLL	Flashes when PV is lower than input range.	

## Installation Method

### Mounting on DIN rail


- Mount the metal part with a spanner so that a large force is not applied to the body.

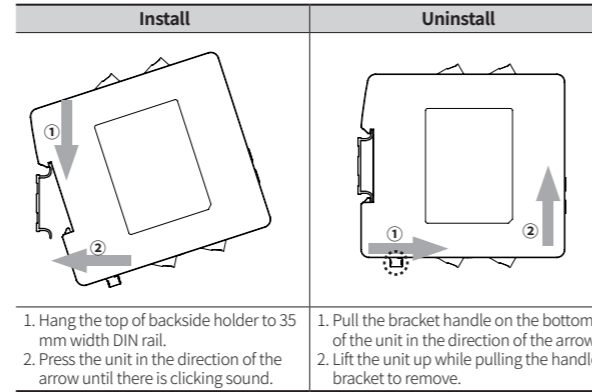

1. Hang the top of backside holder to 35 mm width DIN rail.
  2. Press the unit in the direction of the arrow until there is clicking sound.
1. Pull the bracket handle on the bottom of the unit in the direction of the arrow.
  2. Lift the unit up while pulling the handle bracket to remove.


## Attaching and Detaching a Terminal Unit

### Detaching

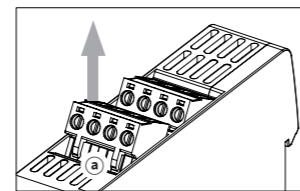

Lift the lower part of the terminal unit  $\text{\textcircled{a}}$  upwards by using a tool (e.g. flat-head driver).


### Attaching

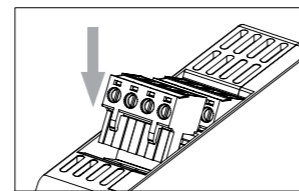

Press the terminal unit downwards to insert.

- When disconnecting terminal unit and wiring, refer to 'Connections' to attach to right position. Failure to follow this instruction may result in fire product damage or malfunction.

## Mode Setting

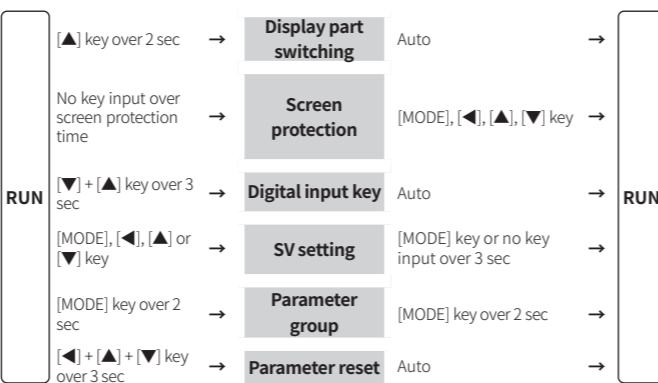

## Parameter Setting

- Some parameters are activated/deactivated depending on the model or setting of other parameters. Refer to the descriptions of each item.
- Select group by  $\text{\blacktriangle}$ ,  $\text{\blacktriangledown}$  key and press [MODE] key to parameter setting mode in parameter group setting mode.
- [MODE] key: Move to next item after saving / Return to upper level with save ( $\geq 2$  sec)  $\text{\blacktriangleleft}$  key: Move digits / Return to the upper level without saving ( $\geq 2$  sec) / Return to RUN mode without saving ( $\geq 3$  sec)
- $\text{\blacktriangle}$ ,  $\text{\blacktriangledown}$  key: Select parameter / Change setting value
- Return to the upper level without saving when there is no key input for more than 30 seconds.
- The range in parentheses '(')' is the setting range when the set value of the 'input specification' parameter is used with one decimal point.
- Recommended parameter setting sequence: Parameter 2 group  $\rightarrow$  Parameter 1 group  $\rightarrow$  SV setting mode

### Parameter 1 group

Parameter	Display	Default	Setting range	Condition
1-1 Lock	LoCk	oFF	OFF LOC1: Lock parameter 2 group LOC2: Lock parameter 1, 2 group LOC3: Lock parameter 1, 2 group + SV setting lock • It is possible to check the value only in lock mode.	-
1-2 Heater current monitoring	Ct - A	-	[CT input model] 0.0 to 50.0 A	2-10/11 Control output 1/2: SSR
1-3 Auto tuning	At	oFF	OFF, ON: Execution	2-9 Control type: PID
1-4 AL1 alarm temperature	AL1	125.0	Deviation alarm: -F.S. to F.S. °C/°F Absolute value alarm: Within input specification • Changing the '2-16/19 AL1/2 alarm operation' and '2-17/20 AL1/2 alarm option' will automatically reset the value to the maximum or minimum that will not be output.	2-16/19 AL1/2 alarm operation: AM1 to AM6, HBA
1-5 AL2 alarm temperature	AL2	125.0		
1-6 Heating proportional band	H - P	1.0	0.1 to 999.9 °C/°F	-
1-7 Heating integral time	H - I	24.0	0 (OFF) to 9999 sec	-
1-8 Heating derivative time	H - d	4.9	0 (OFF) to 9999 sec	-
1-9 Cooling proportional band	C - P	1.0	0.1 to 999.9 °C/°F	-
1-10 Cooling integral time	C - I	24.0	0 (OFF) to 9999 sec	-
1-11 Cooling derivative time	C - d	4.9	0 (OFF) to 9999 sec	-
1-12 Dead band <sup>(01)</sup>	db	0	-Proportional band to +Proportional band °C/°F -999 to 999 (-199.9 to 999.9) °C/°F	2-9 Control type: P,P, P,ON, ON,P 2-9 Control type: ON,ON
1-13 Manual reset	rESt	5.0	0.0 to 100.0%	1-7/10 Heating/Cooling integral time: 0
1-14 Heating hysteresis	HhY5	2	1 to 100 (0.1 to 100.0) °C/°F	2-9 Control type: ONOF &
1-15 Heating OFF offset	Ho5t	0	0 to 100 (0.0 to 100.0) °C/°F	2-8 Control output mode <sup>(02)</sup>
1-16 Cooling hysteresis	ChY5	2	1 to 100 (0.1 to 100.0) °C/°F	
1-17 Cooling OFF offset	Co5t	0	0 to 100 (0.0 to 100.0) °C/°F	

01) When set to the + value, the dead band is formed based on SV and does not control any control. When set to the - value, the overlap band is formed based on SV, perform the heating and cooling control at the same time.

02) Parameter display following to the setting value of '2-8 Control output mode'  
HEAT: '1-14 & 15 Heating hysteresis & OFF offset'  
COOL: '1-16 & 17 Cooling hysteresis & OFF offset'  
H-C: '1-14 & 15 Heating hysteresis & OFF offset', '1-16 & 17 Cooling hysteresis & OFF offset'

### Parameter 2 group

Parameter	Display	Default	Setting range	Condition
2-1 Input specification	Input	TC/RTD	Refer to 'Input Type and Using Range'	-
2-2 Temperature unit	Unit	°C	°C, °F	-
2-3 Sampling period	SPt	5.0	50, 100, 250 ms	-
2-4 Input correction	in - b	0	-999 to 999 (-199.9 to 999.9) °C/°F	-
2-5 Input digital filter	inF	0	0.1 to 120.0 sec	-
2-6 SV low limit value	L - Sv	-5.0	Within 2-1 Input specification L-SV $\leq$ H-SV - 1-digit °C/°F H-SV $\geq$ L-SV + 1-digit °C/°F	-
2-7 SV high limit value	H - Sv	12.0		-
2-8 Control output mode	o - Ft	H - C	HEAT: Heating, COOL: Cooling, H-C: Heating&Cooling	-
2-9 Control type	C - nd	P,P	PID, ONOF: ON/OFF, P,P: PID-PID*, ON,ON: ON/OFF-ON/OFF*, P,ON: PID-ON/OFF*, ON,P: ON/OFF-PID*	* 2-8 Control output mode: H-C
2-10 Control output 1	oUt 1	Curr	(Current/SSR output model)	-
2-11 Control output 2	oUt 2		SSR, CURR: Current	-
2-12 Control output 1 range	oLr 1	4 - 2.0	4-20, 0-20 mA	2-10/11 Control output 1/2: CURR
2-13 Control output 2 range	oLr 2			
2-14 Heating control cycle	H - t	2.0	[Relay output model] 0.5 to 120.0 sec [Current/SSR output model] 0.5 to 120.0 sec	-
2-15 Cooling control cycle	C - t	2.0	[Relay output model] 0.5 to 120.0 sec [Current/SSR output model] 0.5 to 120.0 sec	2-10/11 Control output 1/2: SSR
2-16 AL1 alarm operation	AL - 1	AM6	AM0: OFF AM1: Deviation high limit alarm AM2: Deviation low limit alarm AM3: Deviation high, low limit alarm AM4: Deviation high, low limit reserve alarm AM5: Absolute value high limit alarm AM6: Absolute value low limit alarm SBA: Sensor break alarm LBA: Loop break alarm HBA: Heater break alarm	-
2-17 AL1 alarm option			A: Standard alarm, B: Alarm latch, C: Standby sequence 1, D: Alarm latch and sequence 1, E: Standby sequence 2, F: Alarm latch and sequence 2 • Enter to option setting: Press $\text{\blacktriangleleft}$ key in 2-16 AL-1 alarm operation.	-
2-18 AL1 Hysteresis	ALhY	1	1 to 100 (0.1 to 50.0) °C/°F	2-16/17 AL1/2 Alarm operation: AM1 to AM6 or HBA
2-19 AL2 alarm operation	AL - 2	AM6	[Dual alarm output model] Same as '2-16/17 AL1 alarm operation/option'	2-8 Control output mode: HEAT or COOL
2-20 AL2 alarm option				
2-21 AL2 hysteresis	AL2hY	1	[Dual alarm output model] 1 to 100 (0.1 to 50.0) °C/°F	2-16/17 AL1/2 Alarm operation: AM1 to AM6 or HBA
2-22 LBA time <sup>(03)</sup>	LbRt	0	0 to 9999 sec or auto setting <sup>(03)</sup>	2-16/17 0 to 999 (0.0 to 999.9) °C/°F or Auto setting
2-23 LBA band	LbRb	2		AL1/2 alarm operation: LBA
2-24 Transmission output1 mode	TRo1	Pu	[Transmission output model] PV, SV, H-MV: Heating MV, C-MV: Cooling MV	-
2-25 Transmission output1 low limit	F5Ll	-5.0	[Transmission output model] Refer to 'Input Type and Using Range'	-
2-26 Transmission output1 high limit	F5LH	12.0		-
2-27 Transmission output2 mode	TRo2	Pu	[Dual transmission output model] PV, SV, H-MV: Heating MV, C-MV: Cooling MV	2-8 Control output mode: HEAT or COOL
2-28 Transmission output2 low limit	F5Ll	-5.0	[Dual transmission output model] Refer to 'Input Type and Using Range'	-
2-29 Transmission output2 high limit	F5LH	12.0		-
2-30 Digital input key	dI - t	5 to oP	STOP: Stop control output, ALRE: Alarm reset, AT: Auto tuning execution, OFF	-
2-31 Sensor error, MV	Er. n	0	0.0 (OFF) to 100.0 (ON) -100 (Cooling ON) to 0.0 (OFF) to 100 (Heating ON)	2-8 Control output mode: HEAT or COOL 2-8 Control output mode: H-C
2-32 Screen protection	dSP	oFF	OFF, 1, 30, 60 min	-
2-33 Comm. protocol	PrCL	rTU	RTU: Modbus RTU, ASCII: Modbus ASCII	-
2-34 Comm. address	AdrS	1	1 to 99	-
2-35 Comm. speed	bPS	96	48, 96, 192, 384, 576, 1152 (X100) bps	-
2-36 Comm. parity bit	Prty	nonE	None, Even, Odd	-
2-37 Comm. stop bit	StP	2	1, 2 bit	-
2-38 Response time	rSt	2.0	5 to 99 ms	-
2-39 Comm. write	Co n	En	EN:A: Enable, DISA: Disable	-
2-40 Parameter reset	ri t	no	YES, NO	-

01) - Initialization condition of LBA time (alarm output status)  
Alarm reset, change '2-8 Control output mode' (standard alarm: OFF, alarm latch: OFF),  
Change '2-4 Input correction' or SV (Standard alarm: latch, alarm latch: latch),  
Error status: OPEN, HHHH, LLLL (Standard alarm: Immediately ON, alarm latch: Immediately ON)  
- Stop condition of LBA operation (Alarm output status)  
Set '2-22/23 LBA time/band: 0' (standard alarm: OFF, alarm latch: latch)  
Stop control output, execute auto tuning (standard alarm: OFF, alarm latch: latch),  
If '2-1 Input specification' is changed, the settings are initialized.

02) After auto tuning, the range is set as twice of the integral time automatically. If the previous setting value is outside of the range automatically set, it is set to the nearest Max. or Min. value of the range.

03) After auto tuning, the range is set as 10% of the proportion band automatically. If the previous setting value is outside of the range automatically set, it is set to the nearest Max. or Min. value of the range.