BJR-F Series INSTRUCTION MANUAL

TCD210045AD

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

▲ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) ailure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire

04. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire

▲ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent. ailure to follow this instruction may result in fire

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
- When using a separate power supply for the sensor and load, supply power to the
- The power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise. • When using switching mode power supply (SMPS), ground F.G. terminal and connect
- a condenser between 0V and F.G. terminal to remove noise. · When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000m
- Pollution degree 3
- Installation category I

Product Components

| Sensing type | Through-beam | Polarized retroreflective | Diffuse reflective |
|---------------------------|----------------------|---------------------------|--------------------|
| Product components | Product, instruction | manual | |
| Reflector | - | MS-2S | - |
| Adjustment screwdriver | ×1 | ×1 | ×1 |
| Bracket A or B 01) | × 2 | ×1 | ×1 |
| M3 bolt | × 4 | × 2 | × 2 |

01) Cable type and cable connector type: Bracket A, connector type: Bracket B

Ordering Information

Number: Sensing distance (unit: mm)

Number+M: Sensing distance (unit: m)

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

BJR **0** - **2 3 4 5** -6 - 6 Sensing distance **⑤** Emitter/Receiver

1: Emitte 2. Receiver

Occupant Connection

No mark: Cable type C: Connector type

W: Cable connector type

Sensing type T: Through-beam P: Polarized retroreflective D: Diffuse reflective

O Power supply

Output T: Solid state (transistor)

O Control output No mark: NPN open collector output P: PNP open collector output

3 Oil resistant/Oil proof type F: Oil proof type

No mark: Integrated type

Sold Separately

- · Reflector: MS Series
- M8 connector cable: CID(H)408-□, CLD(H)408-□
- Retroreflective tape: MST Series M12 connector cable: CID(H)3-\(_\), CLD(H)3-\(_\)

Cautions during Installation

- $\bullet \ \mathsf{Be} \ \mathsf{sure} \ \mathsf{to} \ \mathsf{install} \ \mathsf{this} \ \mathsf{product} \ \mathsf{by} \ \mathsf{following} \ \mathsf{the} \ \mathsf{usage} \ \mathsf{environment}, \mathsf{location}, \mathsf{and} \ \mathsf{specified}$ ratings. Consider the listed conditions below.
- Installation environment and background (reflected light)
- Sensing distance and sensing target
- Direction of target's movement
- Characteristic curves
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 0.5 N m. Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- · Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Although some of the cable connector types can have color differences in the connector part
- due to the coating, it does not affect operation and performance.

 Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

| Through-beam Retroreflective | | Reflective | |
|---|---|---|--|
| | | | |
| Emitter - Receiver: Install to face each other | Sensor - Reflector: At least 0.1 m apart, install to face each other (parallel with the sensing side of the unit) | Sensor - Sensing target: Install to face each other (parallel with the sensing side of the unit) | |


Setting Operation Mode

- Be sure to set the mode before power-on.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent
- product damage
- In case of through-beam type, the operation mode switch is on the receiver.

| L: Light ON mode | D: Dark ON mode |
|------------------|-----------------|
| D D | D L |

Operation Timing Chart and Indicators


■ Light ON mode

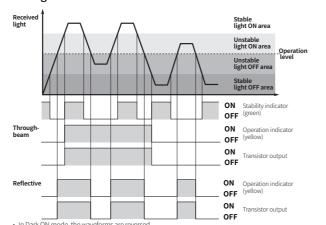


In Dark ON mode, the waveforms are reversed.
 Operation indicator and transistor output differ from the sensing method.


Connections

■ Cable type: Emitter

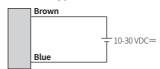

■ Cable type: Receiver, Polarized retroreflective, Diffuse reflective type

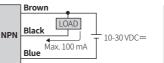

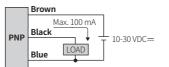

■ Connector type



| Pin | Color | Function |
|-----|-------|----------|
| 1 | Brown | +V |
| 2 | - | - |
| 3 | Blue | 0 V |
| 4 | Black | OUT |

Connector pin ④ is N.C (not connected) terminal for the emitter

■ Cable connector type




| Pin | Color | Function |
|-----|-------|----------|
| 1 | Brown | +V |
| 2 | - | - |
| 3 | Blue | 0 V |
| 4 | Black | OUT |

Connector pin ④ is N.C (not connected) terminal for the emitter.

Max. 100 mA

Circuit

■ NPN open collector output

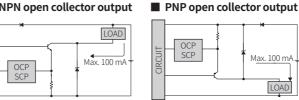

- · OCP (over current protection), SCP (short circuit protection)
- inal or supply current over the rated specification, normal control signal is not output due to the protection circuit.


Sensitivity Adjustment

- · Set the adjuster for stable Light ON area, minimizing the effect of the installation
- · Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The stops helow are based on Light ON mode

| CTED | TED Chatana December 1 | | | |
|------|------------------------|-------------|---|--|
| STEP | Status | Description | | |
| 01 | Received | _ | Turn the adjuster from MIN (—) to MAX (+) sensitivity and check the position (A) where the operation indicator activates under the light ON area. | |
| 02 | Interrupted | | Turn the adjuster from (A) to MAX (+) and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (+, maximum sensitivity): MAX = (B). | |
| 03 | - | Ä B | Set the adjuster at the mid position between (A) and (B) for optimal sensitivity. | |


Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.
- This dimensions shows the cable type and connector type.

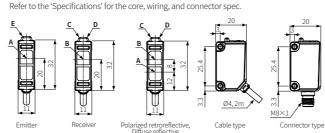

| A | Α | Optical axis of emitter | D | Stability indicator (green) |
|---|---|------------------------------|---|-----------------------------|
| 1 | В | Optical axis of receiver | E | Power indicator (red) |
| | С | Operation indicator (yellow) | | |

■ Reflector (MS-2S)

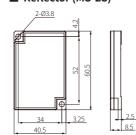


Bracket A

2

■ Bracket B (BJP SERIES BRACKET B)



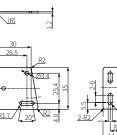

| Specifications | | | | | |
|--------------------------------|--|-----------------|---------------------------|--|--------------------|
| Model | BJR□-TDT | F | BJR3M-PDT-□-□-F | BJR□-DDT | F |
| Sensing type | Through-be | am | Polarized retroreflective | Diffuse reflective | |
| Sensing distance | 10 m | 15 m | 3 m ⁰¹⁾ | 100 mm ⁰²⁾ | 1 m ⁰³⁾ |
| Sensing target | Opaque materials | | Opaque materials | Opaque materials, translucent materials | |
| Min. sensing target | ≥ Ø 12 mm | | ≥ Ø 75 mm | - | - |
| Hysteresis | - | | - | ≤ 20 % of sensing distance | |
| Response time | ≤1ms | | | | |
| Light source | Red LED | Infrared LED | Red LED | Infrared LED | Red LED |
| Peak emission wavelength | 660 nm | 850 nm | 660 nm | 850 nm | 660 nm |
| Sensitivity adjustment | YES (Adjuster) YES (Adjuster) | | | YES (Adjuster) | |
| Mutual interference prevention | - | | YES | YES | |
| Operation mode | Light ON mode - Dark ON mode selectable (Adjuster) | | | | |
| Indicator | Operation indicator (yellow), stability indicator (green), power indicator (red) | | | | |
| Certification | C€ REBU C€ REBU | | | | |

- 01) Reflector (MS-2S)
- 02) Non-glossy white paper 100 imes 100 mm
- 03) Non-glossy white paper 300 × 300 mm
- 04) Only for the emitter

| Unit weight (packaged) | Through-beam | Polarized retroreflective | Diffuse reflective |
|------------------------|-----------------------------------|---------------------------|--|
| Cable type | \approx 95 g (\approx 145 g) | ≈ 50 g (≈ 115 g) | $\approx 50 \mathrm{g} (\approx 100 \mathrm{g})$ |
| Connector type | ≈ 12 g (≈ 65 g) | ≈ 6 g (≈ 75 g) | \approx 6 g (\approx 60 g) |
| Cable connector type | ≈ 55 g (≈ 105 g) | ≈ 30 g (≈ 95 g) | ≈ 30 g (≈ 80 g) |

| Cable connector type | ≈ 55 g (≈ 105 g) | ≈ 30 g (≈ 95 g) | ≈ 30 g (≈ 80 g) | |
|--------------------------------|---|---|-----------------|--|
| | | | | |
| Power supply | 10-30 VDC= ±10 % (ripp | le P-P: ≤ 10 %) | | |
| Current consumption | It depends on the sensing | type | | |
| Through-beam | Emitter: ≤ 20 mA, receive | r: ≤ 20 mA | | |
| Reflective | ≤ 30 mA | | | |
| Control output | NPN open collector outpu | ut / PNP open collector out | put Model | |
| Load voltage | ≤ 30 VDC== | | | |
| Load current | ≤ 100 mA | | | |
| Residual voltage | NPN: ≤ 1 VDC=, PNP: ≤ | 2 VDC= | | |
| Protection circuit | Reverse power protection circuit, output short overcurrent protection circuit | | | |
| Insulation resistance | ≥ 20 MΩ (500 VDC megger) | | | |
| Noise immunity | ±240 VDC== the square wave noise (pulse width: 1 μs) by the noise simulator | | | |
| Dielectric strength | Between the charging part and the case: 1,000 VAC \sim 50/60 Hz for 1 min | | | |
| Vibration | $1.5\mathrm{mm}$ double amplitude at frequency of 10 to $55\mathrm{Hz}$ in each X, Y, Z direction for $2\mathrm{hours}$ | | | |
| Shock | 500 m/s² (\approx 50 G) in each X, Y, Z direction for 3 times | | | |
| Ambient illuminance (receiver) | Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx | | | |
| Ambient temperature | -25 to 60 °C, storage: -40 to 70°C (no freezing or condensation) | | | |
| Ambient humidity | 35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation) | | | |
| Protection rating | IP67 (IEC standard), IP67F (JEM standard) | | | |
| Connection | Cable type / Connector type / Cable connector type model | | | |
| Cable spec. | Ø 4 mm, 3-wire (Emitter: 2 | Ø 4 mm, 3-wire (Emitter: 2-wire), cable type: 2 m, cable connector type: 300 mm | | |
| Wire spec. | AWG26 (0.52 mm, 20-core), insulator outer diameter: Ø 1 mm | | | |
| Connector | Connector type: M8 4-pin plug type, cable connector type: M12 4-pin plug type | | | |
| | | | | |

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002 www.autonics.com | +82-2-2048-1577 | sales@autonics.con

Case: ABS, CAP: PA12, sensing part: PMMA