

LM series

INSTRUCTION MANUAL

Thank you for purchasing Hanyoung Nux products. Please read the instruction manual carefully before using this product, and use the product correctly. Also, please keep this instruction manual where you can view it any time.

HANYOUNG nux

HANYOUNG NUX CO., LTD
28, Gilpa-ro 71beon-gil,
Michuhol-gu, Incheon, Korea
TEL : +82-32-876-4697
http://www.hanyoungnux.com

MF0601KE221205

Safety information

Please read the safety information carefully before the use, and use the product correctly.
The alerts declared in the manual are classified into Danger, Warning and Caution according to their importance

DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor injury or properties damage

DANGER

- The input/output terminals are subject to electric shock risk. Never let the input/output terminals come in contact with your body or conductive substances.
- WARNING** This product does not contain an electric switch or fuse, so the user needs to install a separate electrical switch or fuse externally.(Fuse rating: 250 V 0.5 A)
- To prevent electric shock or malfunction of this product, supply proper power voltage in accordance with the rating.
- To prevent electric shock or malfunction of product, do not supply the power until the wiring is completed.
- Since this product is not designed with explosion-protective structure, do not use it at place with flammable or explosive gas.
- Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron content. (Use at Pollution Level 1 or 2)
- Do not use this product at any place with strong noise such as alcohol or benzene.
- Do not use this product at any place with a large inductive difficulty or occurring static electricity or magnetic noise.
- Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation.
- Install the product at place under 2,000m in altitude.
- When the product gets wet, the inspection is essential because there is a danger of electric leakage or fire.
- If there is excessive noise from the power-supply using insulating transformer or power filter is required, the noise filter must be attached to a panel or ground is connected to a ground and the wire between the filter output and power supply terminal must be as short as possible.
- If putting power cables closely together then it is effective against noise.
- Do not connect anything to the unused terminals.
- After checking the polarity of terminal, connect wires at the correct position.
- When this product is connected to a panel, use a circuit breaker or switch approved with IEC947-1 or IEC947-3.
- Install the circuit breaker or switch at near place for convenient use.
- Write down on a label that if the circuit breaker or switch is operating then the power is disconnected since the circuit breaker or switch is installed.
- For the continuous and safe use of this product, the periodical maintenance is recommended.
- Some parts of this product have limited life span, and others are changed by their usage. The warranty period for this product including parts is one year if this product is properly used.

CAUTION

- The contents of this manual may be changed without prior notification.
- Before using the product you purchased, make sure that it is exactly what you ordered.
- Make sure that there is no damage or abnormality of the product during delivery.

Suffix Code

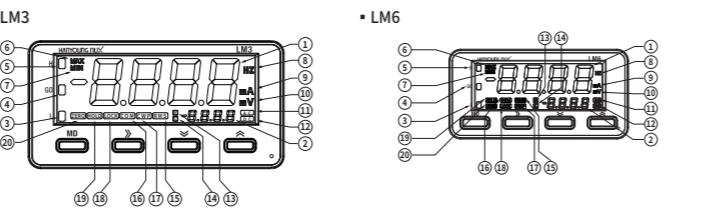
Model	Code	Description
LM	□-□-□-□-□-□-□	LCD Multi Panelmeter
Appearance	3	96(W) X 48(H) mm
Displayable Digit	6	72(W) X 36(H) mm
Input Specification	4	4 Digit indication
DV	□	DC voltage
DA	□	DC current
AV	□	AC voltage
AA	□	Alternating current
Output specifications	N	Non only (Indication option output)
	R	1-stage contact output (For LM6-RC/RT, 1-stage contact output fixed.)
	3R	3-stage contact output
	3N	3-stage NPN open collector output
	3P	3-stage PNP open collector output
Optional output	-	Non option output
	C	RS-485 output (MODBUS-RTU)
	T	Transmission output (4 ~ 20 mA)
Power supply voltage	A	100 ~ 240 V ~ 50/60 Hz

Specifications

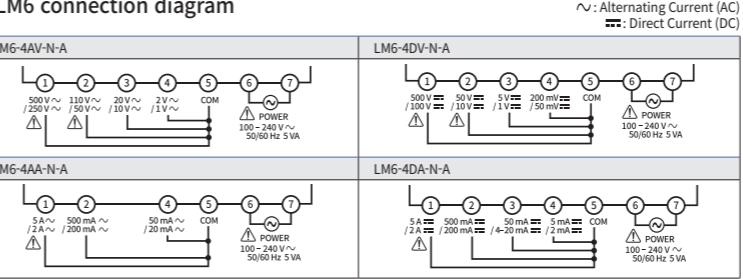
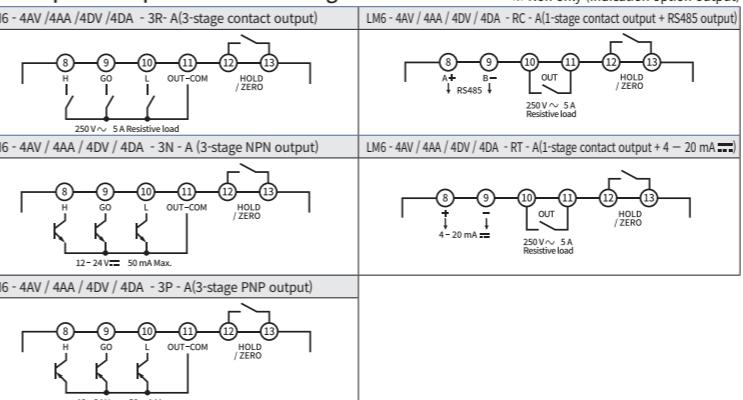
Model	LM3/6-DV	LM3/6-DA	LM3/6-AV	LM3/6-AA	
Size	• LM3 : 96(W) X 48(H) mm	• LM6 : 72(W) X 36(H) mm	• LM6 : 72(W) X 36(H) mm	• LM6 : 81(W) X 36(H) mm	
Power	100 ~ 240 V ~ 50/60 Hz				
Power Consumption	• LM3/6 : 6 VA or less • LM3-3NC/3PC : 9 VA or less • LM6-3NT/3PT : 10 VA or less • LM6-3NC/3PC : 9 VA or less • LM6-3NT/3PT : 10 VA or less	• LM3-3R/3RC : 10 VA or less • LM3-3NT/3PT : 10 VA or less • LM6-3R/3RC : 7 VA or less • LM6-3NT/3PT : 7 VA or less	• LM3-3RT : 11 VA or less • LM6-3RT : 7 VA or less		
Input signal	DC voltage DC current AC voltage / frequency AC current / frequency	500 V / 100 V 50 V / 10 V 5 V / 1 V 200 mV / 50 mV	5 A / 2 A 200 mA / 200 mA 50 mA / 4 ~ 20 mA 5 mA / 2 mA	500 V / 250 V 110 V / 50 V 20 V / 10 V 50 mA / 20 mA	5 A / 2 A 200 mA / 200 mA 50 mA / 4 ~ 20 mA 2 V / 1 V
AC measurement method	AVG / RMS selective measurement				
Input sampling cycle	50 ms				
Input sampling method	OVER sampling method using continuous approximation A / D converter				
Maximum allowable input	F.S. of each input range 110 %				
Frequency measurement range	0.2 ~ 9999 Hz (Frequency measurement range depends on the decimal point position)				
Display	• Negative-LCD : 4 digit rows : PV (White) • SV (Green) • LM3 : 17.6 X 10.6 mm • LM6 : 7.0 X 11.5 mm				
Character size					
Maximum display	-9999 ~ 9999				
Display degree	• [23 °C ± 5 °C] - F.S. ± 0.1 % rdg ± 2 digit • [23 °C ± 5 °C, 5 A] - F.S. ± 0.3 % rdg ± 3 digit • [23 °C ~ 5 °C, 5 A] - F.S. ± 0.5 % rdg ± 3 digit	• [23 °C ± 5 °C] - F.S. ± 0.3 % rdg ± 2 digit • [20 °C ~ -10 °C] - F.S. ± 0.5 % rdg ± 3 digit	• [23 °C ± 5 °C] - F.S. ± 0.3 % rdg ± 2 digit • [20 °C ~ -10 °C] - F.S. ± 0.5 % rdg ± 3 digit	• [23 °C ± 5 °C] - F.S. ± 0.3 % rdg ± 2 digit • [20 °C ~ -10 °C] - F.S. ± 0.5 % rdg ± 3 digit	
Control output	• Contact output : 3 stage, NPN or PNP open collector, 12 ~ 24 V ~ 50mA or less				
Relay life time	• Electrical (about 100,000 times, 250 V ~ 5 A) • Mechanical (about 5 millions times)				
Optional output	• Transmission output (4 ~ 20 mA) • RS-485 output				
External input	• HOLD/ZERO Optional input • Non-voltage input • Short circuit impedance: 300 Ω or less • Residual voltage: 1 V or less • Impedance when open: 10 kΩ or more				
Communication	• Communication protocol : Modbus-RTU • Communication method : RS-485 (2-wire half duplex) • Communication speed : 2400 / 4800 / 9600 / 19200 / 38400 bps				
Insulation Resistance	100 MΩ or more (500 V DC Mega standard, between conductive terminal and case)				
Withstand voltage	2000 V DC 60 Hz 1 minute (between conductive terminal and case)				
Noise	± 2 kV(Between operation power terminals, Pulse width = 1 us, Square wave noise by noise simulator)				
Vibration resistance	10 ~ 55 Hz, Single amplitude 0.5 mm, 3-axis angular, 2 hours				
Approval	CE IEC 61010-1 UL 61010-1 CSA C22.2 No. 1010-1-08				
Protection structure	• IP66 (front) • Terminal block protection cover applied				
Ambient temperature and humidity	-10 ~ 50 °C, 35 ~ 85 % RH				
Storage temperature	-20 ~ 65 °C				

Dimension & Panel cutout

Dimension	Panel cutout
W	W1
D	D1
D1	D2
L	L1
H	H1
W2	A
H2	B
	[Unit:mm]
Classification	Product dimensions (Protective cover)
Type	W H D D1 D2 L W2 H2 W1 H1 A B
LM3	96.0 48.0 55 3.5 16.1 74.6 91.0 44.8 91.5 45.5 121.5 70.5
LM6	72.0 36.0 68 3.5 16.1 87.6 66.0 30.5 66.5 32.0 96.5 57.0

Part names and functions

NO	Function
1	PV Display Operation mode: Measured value / maximum value / minimum value Display Function mode: Parameter display
2	SV Display Operation mode: Set in function mode input range display Function mode: Parameter setting value display Setting mode: Upper / lower limit comparison value display (Only for output model)
3	LOW output lamp Lights up when the lower limit output is operating
4	GO output lamp Lights up during GO output operation
5	HIGH output lamp Lights up during high limit output operation
6	MAX lamp Lights up when the PV display is in the maximum value display mode
7	MIN lamp Lights up when the PV display is in the minimum value display mode
8	HZ lamp Lights up when the PV display is in the frequency measurement mode (Displayed on AV / AA models only)
9	A / mA lamp Lights up when PV display is in current measurement mode
10	V / mV lamp Lights up when PV display is in voltage measurement mode
11	AC lamp Lights up when the model model is DV / DA model
12	DC lamp Lights up when the model model is 4V / 20mA model
13	H lamp Lights up when SV display is in the upper limit comparison value display mode
14	L lamp Lights up when SV display is in the lower limit comparison value display mode
15	RMS lamp Lights up in RMS measurement mode (AV / AA models only)
16	COM lamp Lights up when model model is communication model
17	CWP lamp Lights up when communication write prohibition is set
18	LOCK lamp Lights up when locked
19	HOLD lamp Lights up when external HOLD signal is applied
20	ZERO lamp Lights up when external ZERO signal is applied

LM6 connection diagram※ Alternating Current (AC)
■ Direct Current (DC)

※ Non only (Indication option output)

LM6 option output connection diagram

LM6 - 4AV / 4AA / 4DV / 4DA - 3R: A(3-stage contact output)

LM6 - 4AV / 4AA / 4DV / 4DA - RC: A(1-stage contact output + RS485 output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3N - A: 3-stage NPN output

LM6 - 4AV / 4AA / 4DV / 4DA - RT: A(1-stage contact output + 4 ~ 20 mA)

LM6 - 4AV / 4AA / 4DV / 4DA - 3P: A(3-stage PNP output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-PC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-PT: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)

LM6 - 4AV / 4AA / 4DV / 4DA - 3-CC: A(3-stage PNP open collector output)